


PROKERLAM LINE

ALUMINIUM STONE LINE

KALEIDOS

PKLL... 06/08/10/125

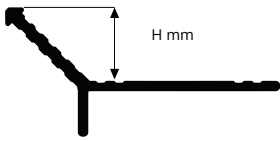

STONE LINE ALUMINIUM

Bar lenght 2,7 lm - Pack 40 PCS - 108 lm

| Article         | H mm | €/lm | €/Pc |
|-----------------|------|------|------|
| PKLLA 06-SL...  | 6    |      |      |
| PKLLA 08-SL...  | 8    |      |      |
| PKLLA 10-SL...  | 10   |      |      |
| PKLLA 125-SL... | 12,5 |      |      |

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROKERLAM LINE" according to the desired finish. 2. Cut "PROKERLAM LINE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROKERLAM LINE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

COLOURS


| STONE LINE         |                       |                   |                   |                        |                    |
|--------------------|-----------------------|-------------------|-------------------|------------------------|--------------------|
| SL02 - Stone cream | SL03 - Stone greyvory | SL04 - Stone sand | SL05 - Stone gray | SL08 - Stone antradark | SL12 - Stone black |

SKIRTING 40

ALUMINIUM STONE LINE

KALEIDOS

BT... 40

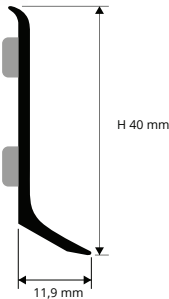

STONE LINE ALUMINIUM

thermo packed - bar length 2 lm - pack. 40 Pcs - 80 lm

| Article      | H mm | €/lm | €/Pc |
|--------------|------|------|------|
| BTA 40-SL... | 40   |      |      |

INTERNAL/EXTERNAL CORNER VARNISHED STONE LINE - L 20 mm

| Article             | H mm | €/Pack. 2pcs | €/Pack. 5pcs |
|---------------------|------|--------------|--------------|
| RIZCTA 40-SL.../... | 40   |              |              |
| REZCTA 40-SL.../... | 40   |              |              |

JOINT - EDGE COVER VARNISHED STONE LINE

| Article             | H mm | €/Pack. 2pcs | €/Pack. 5pcs |
|---------------------|------|--------------|--------------|
| GIZCTA 40-SL.../... | 40   |              |              |

END CAPS R / L - EDGE COVER - VARNISHED METAL STONE LINE pack. 4Pcs (2 R + 2 L) / 10Pcs (5 R + 5 L)

| Article             | H mm | €/Pack. 2pcs | €/Pack. 5pcs |
|---------------------|------|--------------|--------------|
| TPZCTA 40-SL.../... | 40   |              |              |

INTERNAL CORNER



RIZCT... 40/...

EXTERNAL CORNER




REZCT... 40/...

JOINT



GIZCT... 40/...

END CAPS



TPZCT... 40/...

COLOURS


| STONE LINE         |                    |                       |                   |                   |                           |                          |                        |                    |
|--------------------|--------------------|-----------------------|-------------------|-------------------|---------------------------|--------------------------|------------------------|--------------------|
| SL01 - Stone white | SL02 - Stone cream | SL03 - Stone greyvory | SL04 - Stone sand | SL05 - Stone gray | SL06 - Stone cristal gray | SL13 - Stone oyster grey | SL08 - Stone antradark | SL12 - Stone black |

SKIRTING 60

ALUMINIUM STONE LINE

KALEIDOS

BT... 60

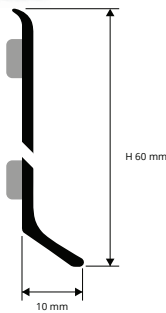

STONE LINE ALUMINIUM

thermo packed - bar length 2 lm - pack. 40 Pcs - 80 lm

| Article      | H mm | €/lm | €/Pc |
|--------------|------|------|------|
| BTA 60-SL... | 60   |      |      |

INTERNAL/EXTERNAL CORNER VARNISHED STONE LINE - L 20 mm

| Article             | H mm | €/Pack. 2pcs | €/Pack. 5pcs |
|---------------------|------|--------------|--------------|
| RIZCTA 60-SL.../... | 60   |              |              |
| REZCTA 60-SL.../... | 60   |              |              |

JOINT - EDGE COVER VARNISHED STONE LINE

| Article             | H mm | €/Pack. 2pcs | €/Pack. 5pcs |
|---------------------|------|--------------|--------------|
| GIZCTA 60-SL.../... | 60   |              |              |

END CAPS R / L - EDGE COVER - VARNISHED METAL STONE LINE pack. 4Pcs (2 R + 2 L) / 10Pcs (5 R + 5 L)

| Article             | H mm | €/Pack. 2pcs | €/Pack. 5pcs |
|---------------------|------|--------------|--------------|
| TPZCTA 60-SL.../... | 60   | 74,18        | 168,63       |

INTERNAL CORNER



RIZCT... 40/...

EXTERNAL CORNER



REZCT... 40/...

JOINT



GIZCT... 40/...

END CAPS



TPZCT... 40/...

1. Choose the "SKIRTING 60" also choose with or without adhesive. 2. Cut the profile to the required length, taking care to calculate the width of the inside-outside corner joints. 3. For the self-adhesive version, the surface must be smooth, grease-free and not porous. It is not recommended for plaster and mortar surfaces (version without adhesive is better, using fast-setting acrylic silicone which is suitable for fixing aluminium to mortar - plaster, etc.). 4. Use the corner linking elements-joints and right and left end caps to facilitate laying.

USE PROBAND FIX FOR FIXING THE PROFILE TO THE WALL



COLOURS


| STONE LINE         |                    |                       |                   |                   |                           |                          |                        |                    |
|--------------------|--------------------|-----------------------|-------------------|-------------------|---------------------------|--------------------------|------------------------|--------------------|
| SL01 - Stone white | SL02 - Stone cream | SL03 - Stone greyvory | SL04 - Stone sand | SL05 - Stone gray | SL06 - Stone cristal gray | SL13 - Stone oyster grey | SL08 - Stone antradark | SL12 - Stone black |

PROLISTEL CHANNEL

ALUMINIUM STONE LINE

KALEIDOS


PLTCH... 10 -12,5

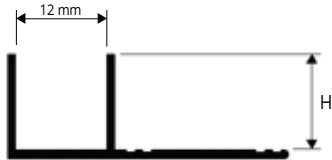

VARNISHED ALUMINIUM STONE LINE thermo packed - pack. 1 Pc

| Article          | H mm | €/ml | €/Pc |
|------------------|------|------|------|
| PLTCHA 10-SL...  | 10   |      |      |
| PLTCHA 125-SL... | 12,5 |      |      |

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

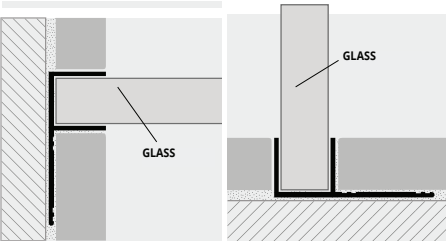

1. Choose "PROSHOWER PROFILE FRONT" according to the desired length. 2. Cut "PROSHOWER PROFILE FRONT" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile. 6. Insert the sheet of glass and seal.

COLOURS

| STONE LINE         |                    |                       |                   |                   |                           |                          |                        |  |
|--------------------|--------------------|-----------------------|-------------------|-------------------|---------------------------|--------------------------|------------------------|--|
| SL01 - Stone white | SL02 - Stone cream | SL03 - Stone greyvory | SL04 - Stone sand | SL05 - Stone gray | SL06 - Stone cristal gray | SL13 - Stone oyster grey | SL08 - Stone antradark |  |