
PROSHOWER PROFILE GLASS


SATINED STAINLESS STEEL AISI 304 / 1.4301 - V2A


PROSHOWER PROFILE GLASS Suitable profile for fixing glass slabs in case of floor level showers with a a slope of 2%. Due to its particular shape and finish in satin-finish stainless steel AISI 304 / 1.4301 – V2A, it covers and decorates the visible side of the screed.

PSHWPGACS...SX

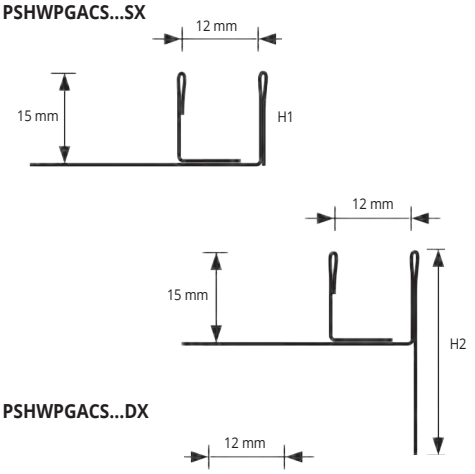

PSHWPGACS...DX

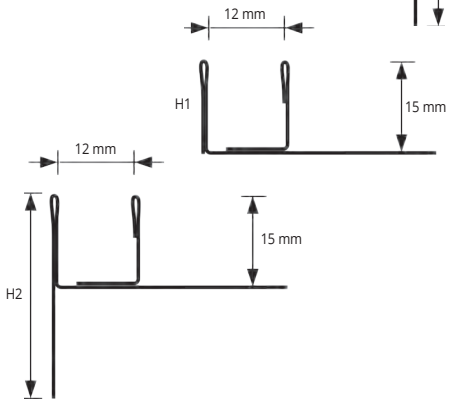

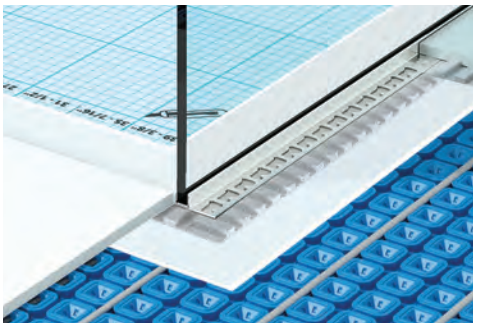

SATINED STAINLESS STEEL AISI 304/1.4301-V2A - LEFT
degreased and passivated - **thermo packed** - Pack. **1 Pc**

Article	H1 mm	H2 mm	L cm
PSHWPGACS 100SX	15	33	100
PSHWPGACS 150SX	15	43	150
PSHWPGACS 200SX	15	53	200


SATINED STAINLESS STEEL AISI 304/1.4301-V2A - RIGHT
degreased and passivated - **thermo packed** - Pack. **1 Pc**

Article	H1 mm	H2 mm	L cm
PSHWPGACS 100DX	15	33	100 cm
PSHWPGACS 150DX	15	43	150 cm
PSHWPGACS 200DX	15	53	200 cm





EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

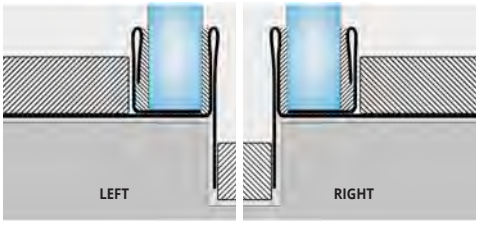


1. Choose "PROSHOWER PROFILE GLASS" according to the desired length. **2.** Cut "PROSHOWER PROFILE GLASS" to the desired length and apply the adhesive on the support where the profile will be laid. **3.** Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive. **4.** Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. **5.** Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile. **6.** Insert the sheet of glass and seal.


PROSHOWER PROFILE


SATINED STAINLESS STEEL AISI 304 / 1.4301 - V2A


PROSHOWER PROFILE is a profile for floor level showers in stainless steel for the protection of the floor edges and as decoration of the screed visible side. The profile has a 2% slope. Its specific shape makes it an easy to lay profile to be used with all kind of floor.

PSHWPACS... SX **PSHWPACS... DX**

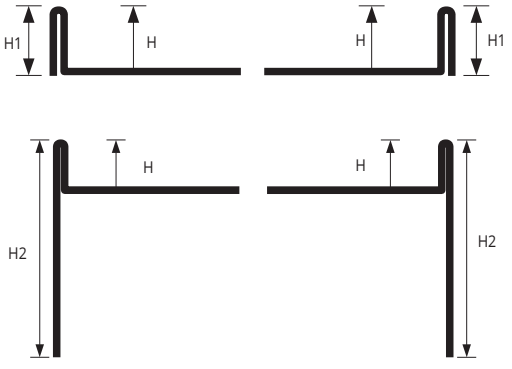






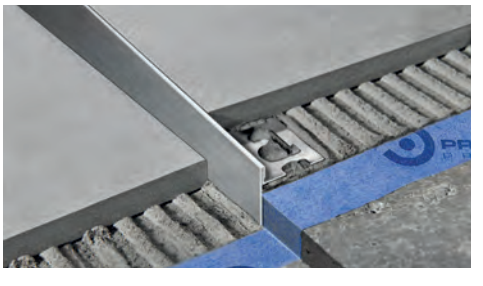

SATINED STAINLESS STEEL AISI 304/1.4301-V2A - RIGHT
degreased and passivated - **thermo packed** - Pack. **1 Pc**

Article	H mm	H1 mm	H2 mm	L cm
PSHWPACS 1010DX	10	11	28	100
PSHWPACS 1015DX	10	11	38	150
PSHWPACS 1020DX	10	11	48	200
PSHWPACS 12510DX	12,5	13,5	30	100
PSHWPACS 12515DX	12,5	13,5	40	150
PSHWPACS 12520DX	12,5	13,5	50	200

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

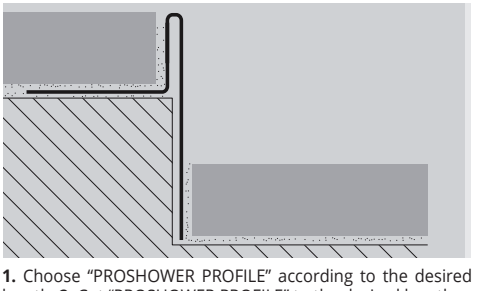

SATINED STAINLESS STEEL AISI 304/1.4301-V2A - LEFT
degreased and passivated - **thermo packed** - Pack. **1 Pc**

Article	H mm	H1 mm	H2 mm	L cm
PSHWPACS 1010SX	10	11	28	100
PSHWPACS 1015SX	10	11	38	150
PSHWPACS 1020SX	10	11	48	200
PSHWPACS 12510SX	12,5	13,5	30	100
PSHWPACS 12515SX	12,5	13,5	40	150
PSHWPACS 12520SX	12,5	13,5	50	200

1. Choose "PROSHOWER PROFILE" according to the desired length. **2.** Cut "PROSHOWER PROFILE" to the desired length and apply the adhesive on the support where the profile will be
laid. **3.** Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive. **4.** Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. **5.** Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile. **6.** Insert the sheet of glass and seal.