
NEWS KALEIDOS

PROSHOWER PROFILE FRONT is an aluminium profile. It is suitable to cover and decorate the visible part of wall in front of the shower tray in case of floor level showers with slope.


PROSHOWER PROFILE FRONT

VARNISHED ALUMINIUM

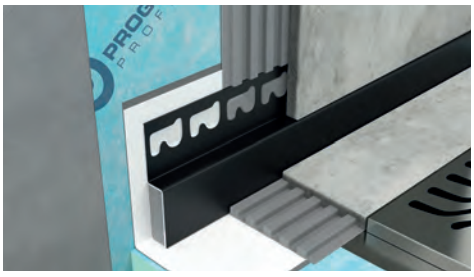

VARNISHED ALUMINIUM EASY LINE
thermo packed - Pack. **1 Pc**


Article	H mm	H1 mm	L cm	
PSHWPFAL 101028-EYP11	10	28	100	
PSHWPFAL 101038-EYP11	10	38	100	
PSHWPFAL 101048-EYP11	10	48	100	
PSHWPFAL 101528-EYP11	10	28	150	
PSHWPFAL 101538-EYP11	10	38	150	
PSHWPFAL 101548-EYP11	10	48	150	

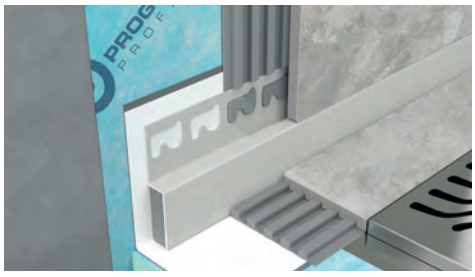


VARNISHED ALUMINIUM STONE LINE
thermo packed - Pack. **1 Pc**


Article	H mm	H1 mm	L cm	
PSHWPFAL 101028-SL..	10	28	100	
PSHWPFAL 101038-SL..	10	38	100	
PSHWPFAL 101048-SL..	10	48	100	
PSHWPFAL 101528-SL..	10	28	150	
PSHWPFAL 101538-SL..	10	38	150	
PSHWPFAL 101548-SL..	10	48	150	

PSHWPFAL ...



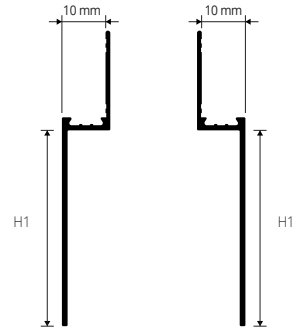

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

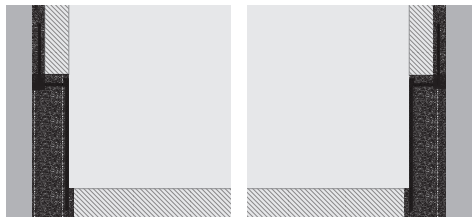


1. Choose "PROSHOWER PROFILE FRONT" according to the desired length. **2.** Cut "PROSHOWER PROFILE FRONT" to the desired length and apply the adhesive on the support where the profile will be laid. **3.** Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive. **4.** Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. **5.** Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile. **6.** Insert the sheet of glass and seal.

KALEIDOS

STONE LINE




SL01 - Stone white | **SL02** - Stone cream | **SL03** - Stone greyvory | **SL04** - Stone sand | **SL05** - Stone gray | **SL06** - Stone cristal gray



SL13 - Stone oyster grey | **SL08** - Stone antradark

EASY LINE




EYP11 - MATT black varnished

NEWS KALEIDOS

PROSHOWER PROFILE WALL Profile in aluminium. It is suitable to cover and decorate the visible part of wall beside the shower tray in case of floor level showers with a slope of 2%.


PROSHOWER PROFILE WALL

VARNISHED ALUMINIUM

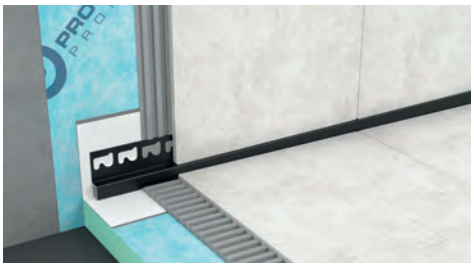

VARNISHED ALUMINIUM EASY LINE
thermo packed - Pack. **1 Pc**


Article	H mm	H1 mm	H2 mm	L cm	
PSHWPLAL 1010DX-EYP11	10	10	28	100	
PSHWPLAL 1015DX-EYP11	10	10	38	100	
PSHWPLAL 1020DX-EYP11	10	10	48	100	
PSHWPLAL 1010SX-EYP11	10	10	28	150	
PSHWPLAL 1015SX-EYP11	10	10	38	150	
PSHWPLAL 1020SX-EYP11	10	10	48	150	

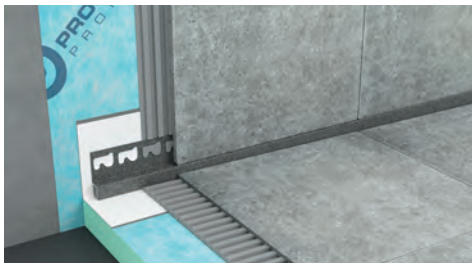


VARNISHED ALUMINIUM STONE LINE
thermo packed - Pack. **1 Pc**


Article	H mm	H1 mm	H2 mm	L cm	
PSHWPLAL 1010DX- SL..	10	10	28	100	
PSHWPLAL 1015DX- SL..	10	10	38	100	
PSHWPLAL 1020DX- SL..	10	10	48	100	
PSHWPLAL 1010SX- SL..	10	10	28	150	
PSHWPLAL 1015SX- SL..	10	10	38	150	
PSHWPLAL 1020SX- SL..	10	10	48	150	

PSHWPLAL ...SX **2% SLOPE**




PSHWPLAL ...DX **2% SLOPE**



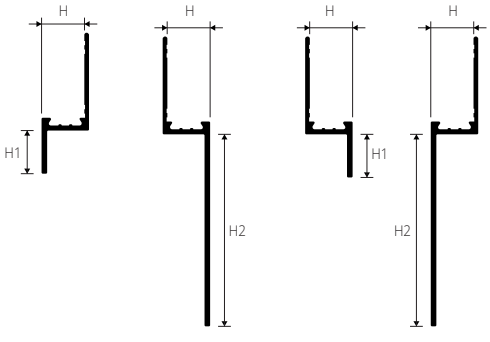

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

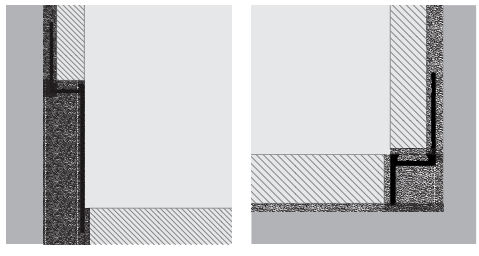

1. Choose "PROSHOWER PROFILE WALL" according to the desired length. **2.** Cut "PROSHOWER PROFILE WALL" to the desired length and apply the adhesive on the support where the profile will be laid. **3.** Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive. **4.** Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. **5.** Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile. **6.** Insert the sheet of glass and seal.

KALEIDOS

STONE LINE



SL01 - Stone white | **SL02** - Stone cream | **SL03** - Stone greyvory | **SL04** - Stone sand | **SL05** - Stone gray | **SL06** - Stone cristal gray



SL13 - Stone oyster grey | **SL08** - Stone antradark

EASY LINE



EYP11 - MATT black varnished