
PROINSERT SYSTEM®

INSTRUCTIONS FOR LAYING

PROGRESS® PROFILES has filed an innovative patent PROINSERT SYSTEM in respect of a wide range of aluminum profiles covered with very strong films in 77 wooden finishes are available, plus 6 anodized finishes.
The **PROINSERT SYSTEM** system comprises a complete set of profiles for finishing laminate, melamine-coated, parquet and wood floating floors.
INTERCHANGEABLE INSERTS in 7 heights: (H 07, 09, 11, 13, 15, 17 and 19 mm). PROFILES COVERED with film: resistant to wear and UV rays (classe AC1). TWO VERSATILE VERSIONS OF BASES: available for fixing with glue or screws.

INSTRUCTIONS FOR LAYING:

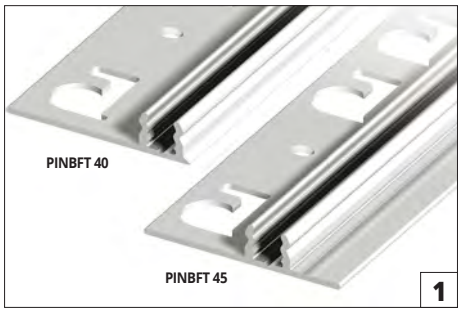

1) Choose between the two types of aluminum base.




2) Fix and/or glue the base to the floor.





3) Lay the floor correctly leaving between 3 and 10 mm gap for the natural expansion of the wood.

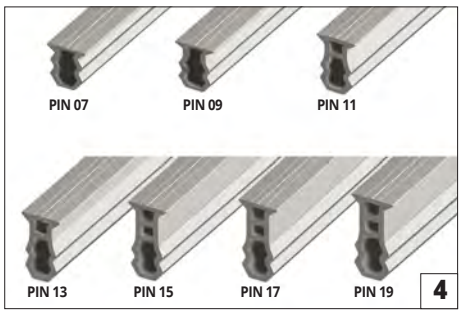

4) Choose the vinyl resin insert according to the clear height and thickness of the floor.



5) Keep the profile with the groove for insertion facing upwards and slot in the insert from the top downwards (if it does not slide easily, lubricate with water, silicone spray or vegetable oil).



6) Place the profile over the "U" shaped channel.



7) With the help of a wooden tapping block, apply pressure evenly over the whole Length of the profile using a hammer. If tapping is done correctly, a "click" will be heard when the profile slots into place.