PROCARPET ALL

NATURAL AND ANODIZED
SILVER ALUMINIUM

PROCARPET ALL is a profile in aluminium (natural or silver anodized) used for joining two floors of differing thickness and in particular for joining a tiled or parquet floor to wall-to-wall carpeting, making a perfect join thanks to the vertical part of less than 4 mm. In addition to completely protecting the edge of the higher floor, this particularly sturdy profile withstands high loads and supports the frequent passage of manual trolleys, vehicles and intense pedestrian traffic.

transition profiles


PRTAN/AA 08




PRTAN/AA 10



PRTAN/AA 125

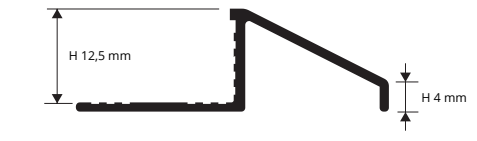

EXAMPLES OF LAYING

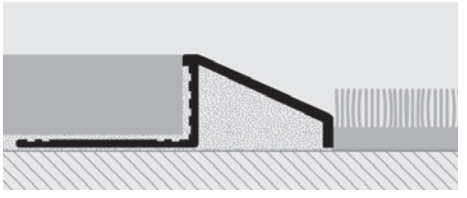



NATURAL ALUMINIUM thermo packed 5 Pcs
bar length **2,70 lm** - pack. **20 Pcs** - **54 lm**

Article	H mm		
PRTAN 08	8		
PRTAN 10	10		
PRTAN 125	12,5		



ANODIZED SILVER ALUMINIUM thermo packed
bar length **2,70 lm** - pack. **20 Pcs** - **54 lm**

Article	H mm		
PRTAA 08	8		
PRTAA 10	10		
PRTAA 125	12,5		

INSTRUCTIONS FOR LAYING
1. Choose the "PROCARPET ALL" taking into consideration the exact height of the floor. **2.** Using a notched spreader apply the adhesive onto the area of application of the profile. **3.** Lay and align the profile, cut to the necessary length, pressing the perforated flange into the adhesive. **4.** Lay the tiles, aligning them so that the top edge of the profile is "flush" with the tile. **5.** Fill the profile/tile area of contact with adhesive to prevent the accumulation of water in any voids.

COLOURS



AN - Natural alum. **AA** - Anodized silver alum.


PROSKID

POLISHED BRASS AND
ANODIZED SILVER ALUMINIUM


PROSKID is a brass and aluminum profile that allows to connect continuously and without steps two adjacent floors that are located on two different levels and protect the edges of the floor. PROSKID in brass and silver anodized aluminium is suitable for any environment where good resistance to mechanical and chemical stress is required.

transition profiles

PSLDOL 10/109/109AS

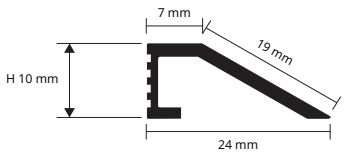

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

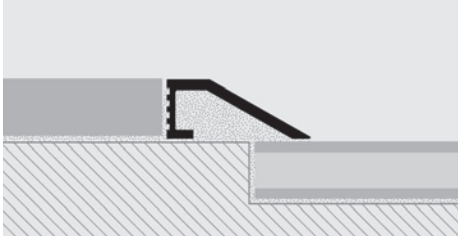

1. Choose the "PROCARPET" taking into consideration the exact height of the floor. **2.** Using a notched spreader apply the adhesive onto the area of application of the profile. **3.** Lay and align the profile, cut to the necessary length, pressing the perforated flange into the adhesive. **4.** Lay the tiles, aligning them so that the top edge of the profile is "flush" with the tile. **5.** Fill the profile/tile area of contact with adhesive to prevent the accumulation of water in any voids.



POLISHED BRASS thermo packed
bar length **0,90 lm** - pack. **20 Pcs**

SELF PACK


Article	H mm		
PSLDOL 109AS	10		



ANODIZED SILVER ALUMINIUM thermo packed
bar length **2,70 lm** - pack. **20 Pcs** - **54 lm**

Article	H mm		
PSLDAA 10	10		

COLOURS



OL - Polished brass **AA** - Anodized silver alum.