



PROJOLLY SQUARE is a square corner bead profile in brushed and tiltex aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings, like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles and also as separation profile for floor and wall coverings. Its particular section and elegance, the availability in eight finishes and special pieces such as internal and external corners, end caps and joints make **PROJOLLY SQUARE** a much sought-after profile that allows an elegant workmanlike application.

PROJOLLY SQUARE

ANODIZED BRUSHED TILTEX ALUMINIUM



ANOD. BRUSHED TILTEX ALUM. thermo Packed (copper-titanium)
- bar length 2,7 lm - Pack 40 Pcs - 108 lm (H 12,5 mm - Pack 20 Pcs - 54 lm)


ANOD. BRUSHED TILTEX ALUM. thermo Packed (silver)
- bar length 2,7 lm - Pack 40 Pcs - 108 lm (H 12,5 mm - Pack 20 Pcs - 54 lm)

Article	H mm		
PJQSRX 06	6		
PJQSRX 08	8		
PJQSRX 10	10		
PJQSRX 125	12,5		
PJQSTX 06	6		
PJQSTX 08	8		
PJQSTX 10	10		
PJQSTX 11	11		
PJQSTX 125	12,5		


Article	H mm		
PJQSBX 06	6		
PJQSBX 08	8		
PJQSBX 10	10		
PJQSBX 11	11		
PJQSBX 125	12,5		

COLOURS

ANOD. BRUSHED TILTEX		
BX - Silver TILTEX	RX - Copper TILTEX	TX - Titanium TILTEX

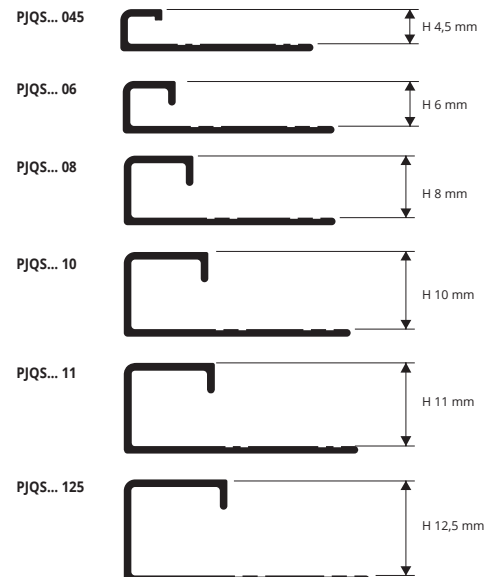

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

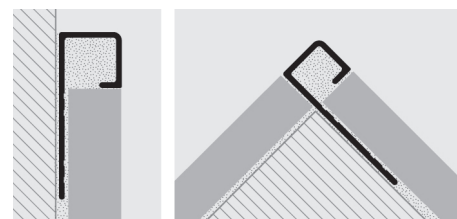

1. Choose "PROJOLLY SQUARE" according to the tile thickness and desired finish. 2. Cut "PROJOLLY SQUARE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

CAPSULES, END CAPS and THREE-WAYS JOINTS

ANODIZED BRUSHED TILTEX ALUMINIUM / PLASTIC

Capsules & end caps of the on demand profiles are also on demand *

CAPSULES and END CAPS - ANODIZED BRUSHED TILTEX ALUMINIUM

Article	H mm		
CPJQSBX .../...	06/08/10/ 11/125		
TPJQSBX .../...	06/08/10/ 11/125		
CPJQSRX .../...	06/08/10/125		
TPJQSRX .../...	06/08/10/125		
CPJQSTX .../...	06/08/10/11/125		
TPJQSTX .../...	06/08/10/11/125		

Choose the desired pack. & height
Ex.: 10 mm capsule in 10 Pcs Pack - CPJQSBX 10/10

JOINTS - PLASTIC

Article	H mm		
GIJQ .../...	045/06/08/ 10/11/125		

Choose the desired pack. & height
Ex.: 8 mm joint in 10 Pcs Pack - GIJQ 08/10

